
## **Antec**®

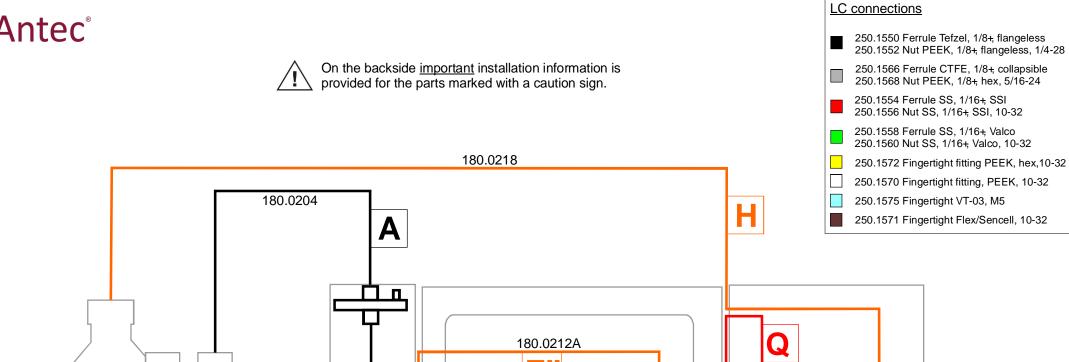


0

180.0206A

B

180.0210A

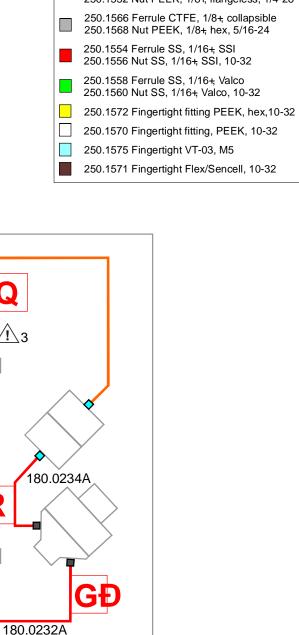

180.0230

## Antec®



## **IMPORTANT INSTALLATION INFORMATION**

Before installation of the LC connection kit, read the LC connection kit install guide (p/n 180.7001A).

- 1. For optimal performance it is required to passivate all metal parts in this system using a 15% solution of HNO3.
- 2. The piston wash tubing assembly is <u>not</u> a part of the LC connection kit, it is supplied in the LC 110 shipkit (p/n 193.0426). Please read the installation instructions in manual 193.0010. For <u>all</u> pumps in the system the active piston wash should be installed).
- 3. In this schematical drawing only the analytical column is shown, in case a quard column is available in your system, connect the guard column to the inlet of the analytical column as described in the installation guide delivered with the columns. In case no tubing connection is delivered with the guard column itself, one can use the DECADE II precolumn assembly (p/n 180.0227) delivered with this kit. Only use this tubing in case no connecting tubing was supplied with the guard column itself.

## Legend LC tubing

FEP 1/8+, 1.59 mm ID, transparent

PEEK 1/16+, 0.50 mm ID, orange-striped

PEEK 1/16+, 0.25 mm ID, blue-striped

PEEK 1/16+, 0.13 mm ID, red-striped

PEEK 1/16+, 0.064 mm ID, pink-striped

Silicone 3 mm, 1 mm ID, transparent

Stainless Steel 1/16+, 0.50 mm ID, metal