

SEAL WEAR-IN PROCEDURE LC 110 / LC 110S

In this document the seal wear-in procedure is described, which should be executed after installation of new high-pressure seals:

193.0308 LC 110 / LC 110S piston seal, high pressure, PTFE



This procedure is crucial for proper operation of the pump head. In case new seals are not wear-in correctly it may lead to leakage or poor pump performance. A worn or scratched piston needs to be replaced immediately. Use a magnifying glass, as scratches and other signs of wear may not be visible to the naked eye. For optimal performance use Zirconium pistons.

Requirements

1. Mobile phase (MP) for seal wear-in: degassed Iso-propanol/Water 20/80 v/v%
2. Restriction capillary which gives a system pressure of approximately 375 bar @ 2 mL/min.

Wear-in procedure

1. Connect the bottle with MP for seal wear-in.
2. Connect the restriction capillary to the purge valve. Insert the other end into a waste container.
3. Open the purge valve and prime the pump head with MP, purge the system for 3 minutes with MP at a flow rate of 10 ml/min.
4. Close the purge valve, set the flow rate to (approximately) 2 mL/min adequate to achieve a system pressure of 375 bar.
5. Pump for 45 minutes at this pressure to wear in the seals. Check that the system pressure stabilizes over time. The system pressure can be monitored using Clarity (auxiliary channel).
6. Turn OFF the pump and slowly open the purge valve to release the pressure from the system.
7. Connect the bottle with mobile phase of the application.
8. Open the purge valve and prime the pump head with MP, purge the system for 3 minutes with MP at a flow rate of 10 ml/min.
9. Close the purge valve, remove the restriction capillary and connect the pump back to the LC system.
10. The pump is ready for use again.

Copyright ©2021 Antec. All rights reserved. Contents of this publication may not be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from the copyright of the owner. The information contained in this document is subject to change without notice. The information provided herein is believed to be reliable. Antec shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual. All use of the hardware shall be entirely at the user's own risk